


For framed doors we are familiar with offset handle shapes on the closing side of the door, and standard shapes on the other side, the so-called “Wittgenstein solution”. Hadi Teherani solved the function of the offset handle to avert the risk of skinning your thumb on the door frame, by simply shifting the handle’s axis of rotation to the left.

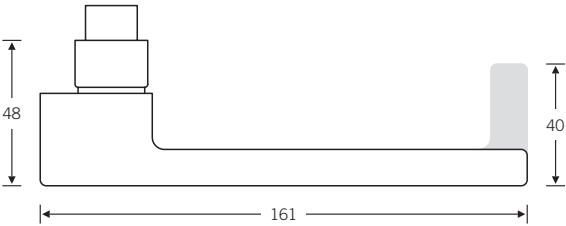

Recommended rose variants



Design: Hadi Teherani

EN 179 model: FSB 1074

In aluminium only available in natural anodised finish (FSB 0105)

* only with a round rose

surface mount	●	●	●	●
flush mount*	●	●	●	●

Glass door fitting



Standard	☒	☒

13 4220 with 10 1183 | page 400


Handles for framed doors



Standard	☒	☒	☒

09 1074 (straight)* | page 353
06 0644 (offset) | page 352

Doorknobs

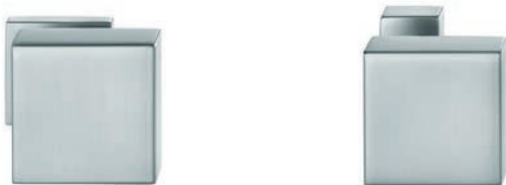

Solid doors	☒	☒	☒
Framed doors	☐	☒	☒

23 0873 | page 271
07 0873

Window handle






Standard, RAL	☒
Rose, low profile	☒
Lockable	☒

34 1183 | page 295

* suitable for a backset from 40 mm

Additional items for large buildings:


Electronic access organisation | page 37 ff.
Barrier-free ErgoSystem | page 555 ff.

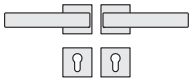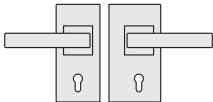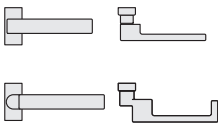Door handle fittings		   	   
		 	 
Handles for framed doors			
		   	   
Knobs for framed doors		  	  
		  	  
			

R = DIN right hand
L = DIN left hand
ldf = inactive door fitting


* suitable for a backset from 40 mm

Entrance door fittings

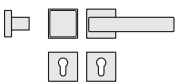

- 72 1183 043 (R)
- 76 1183 041 (R)
- 76 1183 043 (ldf)
- 79 1074 041 (R)
- 79 1074 043 (ldf)
- 10 1183 | 17 1703 019 | 17 1704 | 23 0811 00026
- 72 1183 044 (L)
- 76 1183 042 (L)
- 79 1074 042 (L)

WC fittings

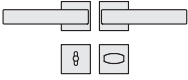

- 72 1183 045 (R)
- 72 1183 046 (L)
- 10 1183 | 17 1703 018 | 17 1704 00054

Window handles



- 34 1183 068 (commercial version)
- 34 1183 067 (low-profile rose)
- 34 1183 070 (locking adapter)
- 34 1183 076 (ditto with pushbutton)